

# ENVIRO

## Options & Accessories For Waterborne Spray Gun Cleaners




### BECCA WATERBORNE HEAT SYSTEMS

#### BECCA EXCLUSIVE HEAT ON DEMAND

This rapid heat rise, energy efficient design meets Class I Division 1 requirements allowing it to be placed inside the paint mix room. (120V @ 10.5A)

**A User Reports:** "The warm cleaning solution really gets the fluid passageways clean quickly, and my fluid tip, needle and seals stay clean. It's GREAT!"

Shown on  
E300A

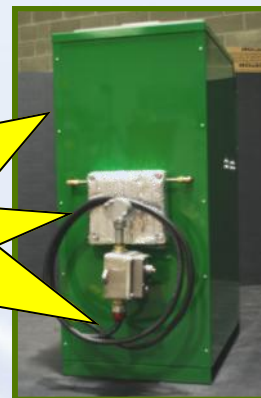

Check out our  
Brief  
Training Videos at  
[www.beccainc.com](http://www.beccainc.com)

#### BECCA EXCLUSIVE STANDARD HEAT SYSTEM

Similar to a hot water tank, this system utilizes a heat band and is programmed with a supplied timer to reach the ideal cleaning temperature. This affordable heat option is ideal for units placed outside the paint mix room. (120V @ 4.6A)



Shown on  
E100M

#### BECCA COVER DOOR — For Workstation Systems

The E700M & E800A Spray Gun Cleaning Workstation's have available a Cover Door to meet local jurisdiction requirements. Although not required per NESHAP. Some jurisdiction interpretations lead to its addition.



#### BECCA PROTECT FILM

This Poly maintenance material is designed to keep your investment looking good through it's life. It is easily applied like a decal and can be peeled off when ready to apply a new coat. It can be provided on a unit at the factory or purchased by the roll to be applied in the field. .



**BECCA**

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152  
Phone 800.655.5649 Fax 800.655.5684 Internet: [www.beccainc.com](http://www.beccainc.com)

# ENVIRO

## Options & Accessories For Waterborne Spray Gun Cleaners



### BECCA FILTRATION SYSTEMS - FREE UP OPERATOR TIME

BECCA's Filtration Systems are designed to remove paint residues from the system continually. This in combination with the proprietary BECCA Clarification System provides a cleaner process and allows for less periodic maintenance of the system.

### BECCA SINGLE CARTRIDGE FILTRATION

The ENVIRO E50M and E100M have a 75 Micron Filter Module to help provide a more productive system.



Single  
Cartridge  
System



Dual Cartridge System



Dual Cartridge System  
Shown on E800A

### BECCA DUAL CARTRIDGE FILTRATION

The ENVIRO E300A, E700M & E800A have a two stage Filter System including a 75 Micron and a 25 Micron Filter providing the best overall paint residue control.


### BECCA DUAL POWERCLEAN KIT— For 2ND Spray Gun in The Wash Basin

This system is designed to provide POWERCLEAN compressed air connections to two spray guns in the Wash Basin at the same time.



#### ENVIRO E300A DUAL POWERCLEAN KIT

-Second Spray Gun Connection in the Wash Basin

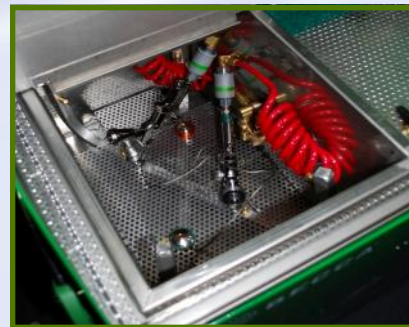

#### ENVIRO E800A DUAL POWERCLEAN KIT

-Second Spray Gun Connection in the Wash Basin



**BECCA**

2010 Cobb International Blvd, Suite H Kennesaw, GA 30152  
Phone 800.655.5649 Fax 800.655.5684 Internet: [www.beccainc.com](http://www.beccainc.com)